




nFORCE LED Interior Lightbar
2018-2021 JEEP WRANGLER

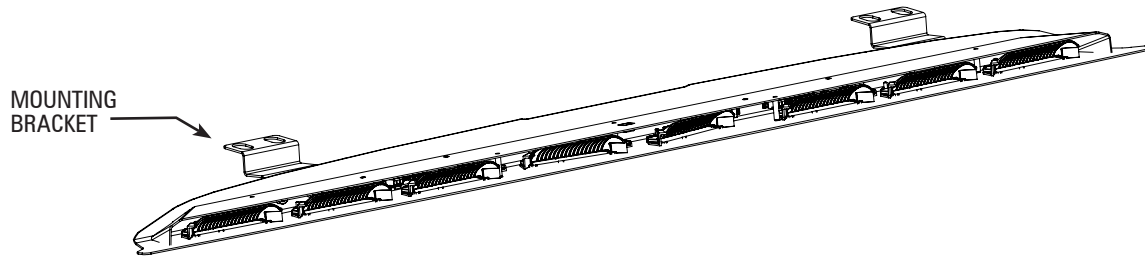

⚠ WARNING

- HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.
- Do NOT use system to disconnect headlights, brake lights or other safety equipment.
- Unit may become hot to touch during normal operation.
- Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.
- Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.
- Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.
- Install protective grommets when routing wire through firewall or metal.



1.800.338.7337 / www.soundoffsignal.com

NOTICE:

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

Improper use or installation may void warranty coverage.

To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/tech-services/returns/.

If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. ET at 1.800.338.7337 (press #4).

Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.

INSTALLATION:

1. Unlatch and open the soft top or remove hard top panels.
2. Remove the hardware using a T-40 Torx socket and loosely install the supplied brackets.

NOTE: The bracket is not symmetric. The slots on the brackets are 2 different sizes. The larger holes must be used on the top.

3. Tilt the lightbar into place, careful not to knock off the smaller end gaskets.
4. Loosely attach the lightbar to the brackets using the supplied T-40 Torx bolts and washers.
5. After completing the wire routing, push the light brackets forward until they rest against the plastic trim.
6. Tighten the factory T-40 screws, some adjustments may be necessary to re-align the brackets to your top latches.
7. Push up on the light bar and tighten the T-40 screws from bracket to the lightbar.

NOTE: Do NOT exceed 25 ft. lbs of torque.

OPERATION:

SEE 'ELECTRICAL INSTALLATION' SECTION OF THE nFORCE LED INTERIOR LIGHTBAR INSTALLATION PACKET.

ENHANCING SAFETY THROUGH INNOVATION