
PETLK09 - Extended Reach Low Profile Mount Foot

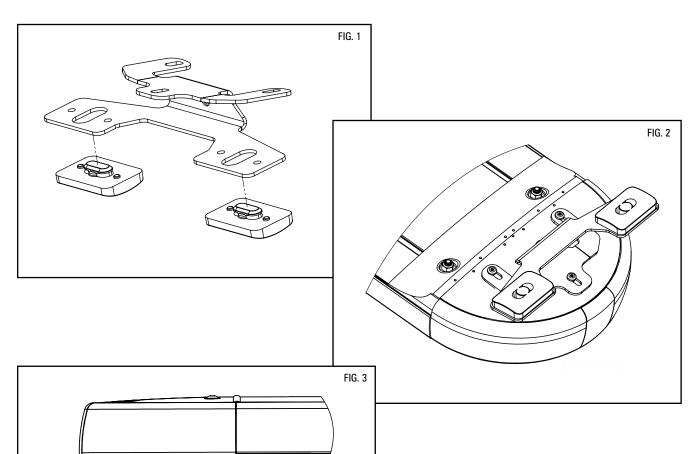

Installation Instructions

- 1. Assemble bumpers to bracket by inserting into the slot and rotating to lock into place (Fig 1.)
- 2. Attach the foot to the lightbar using the three #10 screws. Do not tighten at this point, to allow for adjustment on the car.
- 3. Position the lightbar on the vehicle, space the bracket and bumpers to the furthermost edge of the vehicle roof (Fig 3.) Tighten the three screws to 35-40 in/lbs. Do not overtighten (Fig 2.)
- 4. Attach the hook bracket to the car using the provided hardware.
- 5. Insert the $\frac{1}{4}$ -20 bolt into the bracket and tighten to 12 -14 in/lbs. Do not overtighten it may damage the roof.

PACKAGE CONTENTS	
Quantity	Description
1	EPL Extended Mounting Foot Bracket
2	Bumper for mounting bracket
3	#10 Self tapping screws

A WARNING

Care must be taken when drilling through the roof of the vehicle not to drill into any existing wiring and not to drill through the headliner or support members of the vehicle.

Check both sides of the mounting service prior to drilling.

De-burr any holes and remove any metal shards or remnants.

Install grommets into all wire passage holes.

NOTICE:

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

Improper use or installation may void warranty coverage.

To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/tech-services/returns/. If you have questions regarding this product, contact Technical Services, Monday - Friday, 8 a.m. to 5 p.m. or after hours 5 p.m. to 8 p.m. ET at 1.800.338.7337 (press #4).

Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.

SUPERIOR CUSTOMER RELATIONSHIPS. SMARTLY DESIGNED LIGHTING & ELECTRONIC SOLUTIONS.

oundOff

ignal||||||||