
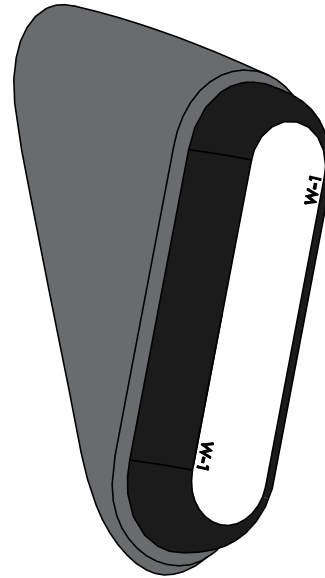


D-PILLAR WEDGE MOUNT KIT FOR 2021-2023 CHEVROLET TAHOE POLICE PURSUIT & CIVILIAN VEHICLES

PMP1BK001 - 2 Wedge Kit

PMP1BK003 - 6 Wedge Kit

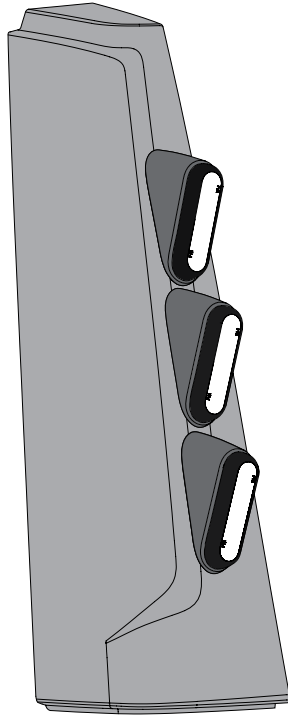

*LH/Driver side shown

⚠ WARNING ⚠

- HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.
- Do NOT use system to disconnect headlights, brake lights or other safety equipment.
- Unit may become hot to touch during normal operation.
- Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.
- Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.
- Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.
- Install protective grommets when routing wire through firewall or metal.

INTRODUCTION..... 2
 COMPONENTS 2
 INSTALLATION INSTRUCTIONS 2
 INSTALLATION IMAGES 3

⚠ WARNING

ROUTE WIRES ONLY IN LOCATIONS THAT ARE NOT SUBJECTED TO POTENTIAL WEAR. MAKE SURE TO AVOID ROUTING WIRES IN THE DEPLOYMENT AREA OF YOUR AIR BAG. REFER TO YOUR VEHICLE'S OWNER'S MANUAL FOR AIRBAG DEPLOYMENT ZONES.



Is this the latest version?



1.800.338.7337 / www.soundoffsignal.com

NOTICE:

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices. *Improper use or installation may void warranty coverage. To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/tech-services/returns/. If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. ET at **1.800.338.7337** (press #4). Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.*

INTRODUCTION:

Thank you for purchasing the 2021-2022 Chevrolet Tahoe D-Pillar wedge mount kit.

D-Pillar wedge features include:

- Simple, adhesive-based install
- Mount up to 6, 3" mpower quick-mount fascia lights
- Flexible mounting configurations
- Increased rear facing, perimeter lighting solution

The D-Pillar wedge is a mounting solution for the 3" mpower® Fascia Light. The mpower® Fascia Light features include:

- 3" Quick Mount is compatible with this bracket design
- Collaboration with Dow Corning® to develop ClearDuty™ optical design
- Greater resistance to gravel pitting, scratching, or cracking
- Improved sealing to prevent water from entering light
- Higher UV and thermal stability to prevent lens from yellowing over time

| CONTAINS | | | |
|----------|------------------------------------|-----------------|-----------------|
| ITEM # | COMPONENT | PMP1BK001 /QTY. | PMP1BK003 /QTY. |
| 1 | D-PILLAR REAR MOUNT WEDGE, LH | 1 | 3 |
| 2 | D-PILLAR REAR MOUNT WEDGE, RH | 1 | 3 |
| 3 | D-PILLAR REAR MOUNT WEDGE ADHESIVE | 2 | 6 |
| 4 | #10 SELF-TAPPING SCREWS | 4 | 12 |
| 5 | INSTALLATION INSTRUCTION SHEET | 1 | 1 |
| 6 | PRODUCT WARNING CARD | 1 | 1 |
| 7 | CA PROP 65 LABEL | 1 | 1 |

INSTALLATION:

1. Remove the interior D-pillar panel to access the area behind the exterior D-pillar moulding. Removing the entire D-pillar assembly is recommended for wire routing. Consult a Chevrolet service center for best disassembly method.
2. Refer to the diagram shown in **Fig. 1** for recommended wedge positions along the D-pillar. Mark each position in the locations shown.

NOTE: Ensure the upper wedge is within the corner of the D-pillar as shown.

3. Before installing the wedges, ensure the driver side (LH) and passenger side (RH) wedges are separated. An identifier is located on the inside surface of each wedge, as shown in **Fig. 2**.
4. Hold the appropriate D-pillar wedge in position and mark the wire hole location. Repeat for each desired position on both the driver and passenger sides.
5. Using a 7/16" drill bit, drill out the wire holes at each marked location.
6. Using the provided alcohol wipe, clean the mounting surface of the wedge. Once dry, remove the white liner from the provided adhesive and carefully apply to the wedge surface, as shown in **Fig. 3**. Apply pressure for 30 seconds to ensure proper adhesion.
7. With the provided alcohol wipe, clean the surface of the D-pillar where the wedge will be applied.
8. With the D-pillar wedge in hand, remove the red liner on the wedge adhesive and carefully position the wedge on the D-pillar by holding it perpendicular to the D-pillar

9. Pivot the wedge on its bottom edge towards the D-pillar surface while lining up the wedge in the D-pillar feature. Once fully seated, apply firm pressure on the wedge for 30 seconds to ensure proper adhesion.
10. **OPTIONAL:** Screws are provided and may be installed if desired, as shown in **Fig. 5**. However, they are not required. Ensure the area behind each wedge is free of obstructions prior to fastening with screws.



11. Route the required wire harnesses to each mounting location.
12. Connect a 3" quick-mount mpower light to the wire harness.
13. While feeding the wire harness back into the wire hole in the D-pillar, attach the light to the mounted wedge, as shown in **Fig. 6**. Ensure the surface of the wedge is clean using the provided alcohol wipe. Apply pressure for 30 seconds to ensure proper adhesion.
14. Repeat steps 6 – 13 for each D-pillar wedge on both the driver (LH) and passenger (RH) sides.
15. **Fig. 7** shows the fully installed D-pillar wedge assembly.
16. Test to ensure proper functionality.



Allow **72 hours** for the adhesive to fully cure. Avoid wet conditions and high pressure spray until fully cure.

